

Friesland Life Decore Akzent 5131			
Büroplatte Kaffee	20 cm Ø	5-5131-45	
Büroplatte Tee	24 cm Ø	5-5131-46	
Büro-Set Kaffee		5-5131-00	
Büro-Set Tee		5-5131-01	
Butterdose	250 g	5-5131-43	
Deckelschüssel	2,2 L	5-5131-58	1
Dessertschale	14 cm Ø		9
Dessertteller	20 cm Ø	5-5131-31	7
Eierbecher		5-5131-44	4
Garnitur Salz-/Pefferstreuer		5-5131-98	1
Gießer 3	0,18 L	5-5131-34	1
Kaffeekanne	0,40 L	5-5131-10	
Kaffeekanne	1,10 L	5-5131-12	1
Kompottschale	11 cm Ø	5-5131-73	
Königskuchenplatte	31 cm Ø	5-5131-47	
Königskuchenplatte	15,5 x 32 cm		
Mokka-Obertasse	0,11 L	5-5131-28	
Mokkateller	17 cm Ø	5-5131-30	
Mokka-Untertasse	11 cm Ø	5-5131-29	
Obertasse	0,19 L		1
Obertasse 3	0,18 L	5-5131-21	6
Obertasse 3 N	0,17 L	5-5131-25	
Pefferstreuer		5-5131-97	
Platte	15 x 24 cm		
Platte 1	24 cm Ø	5-5131-75	
Platte 4	20 x 32 cm	5-5131-63	1
Platte 5	36 cm Ø	5-5131-64	
Portionsgießer	0,02 L	5-5131-32	1
Portions-Zuckerschale		5-5131-35	1
Salatschüssel 1	14 cm Ø	5-5131-78	1

Salatschüssel 3	17 cm Ø	5-5131-59	
Salatschüssel 4	20 cm Ø	5-5131-60	1
Salatteller	14 cm Ø	5-5131-76	
Salzstreuer		5-5131-99	
Sauciere mit Utl.	0,55 L	5-5131-61	1
Sauciere ohne Utl.	0,55 L	5-5131-55	
Stövchen 3	14 cm Ø	5-5109-20	
Stövchen, klein		5-5109-19	
Suppenobertasse	0,30 L	5-5131-70	2
Suppenuntertasse/Sauc. Utl.		5-5109-77	2
Süßstoffspender		5-5131-39	
Teekanne	0,40 L	5-5131-16	
Teekanne	1,10 L	5-5131-17	1
Teller, flach	24 cm Ø	5-5131-66	6
Teller, flach	27 cm Ø	5-5131-68	
Teller, tief	22 cm Ø	5-5131-65	6
Tortenplatte	30 cm Ø	5-5131-48	
Untertasse 3/3 N/4	14 cm Ø	5-5131-26	6
Zuckerdose 3 / Mado	0,24 L	5-5131-37	1